




These replacement elements for your toaster have a specially developed covering to give greater efficiency and a longer life to the elements.

The clear mica film is the protective shield and must not be removed, as this will invalidate the warranty.

Please note:- The new elements supplied for your toaster will not glow bright orange like the originals, this is quite normal, and is part of the energy efficient design. They are also a slightly different shape, but will still fit into your toaster.

Fitting instructions.

- 1. Disconnect the toaster from the mains electricity supply.**
2. Unscrew the rubber feet, and any other screws on the base, and remove the base plate together with the crumb tray.
3. Loosen the two screws securing the element retaining strip and slide it clear of the elements.
4. Unscrew the nuts which secure the connecting links, pull out the old element, and slide in the new element. Please be careful not to damage the mica wrapper.
5. Re-connect the element as before, making sure that the nuts are securely tightened.

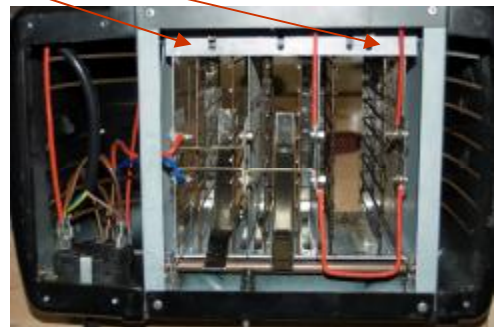

Note for bread toasters:

Make sure that you have the high power elements marked "CENTRE" in the middle, and the low power elements marked "END" at the ends.

Note for sandwich toasters:

2 slot models; Use the 4 "END" Elements only.
4 slot models; Use 6 "END" elements and 1 "CENTRE" element.

Tools required:

- 1 medium size cross head (Pozi-drive) screwdriver.
- 1 4 BA spanner (if not available use pliers)
- 1 pair of long nosed pliers.